

# **ISOMETER® IR423**

Insulation monitoring device for mobile generators



## **ISOMETER® IR423**



#### **Device features**

- Insulation monitoring for mobile generators AC 0...300 V
- Protection by electrical separation with insulation monitoring and disconnection
- Version "W" for protection against high mechanical stress
- · Two separately adjustable response values
- · Connection monitoring system/earth
- Power On LED, alarm LEDs: Alarm 1, Alarm 2
- Internal/external test/reset button
- Two separate alarm relays (one changeover contact each)
- N/O or N/C operation, selectable
- · Fault memory behaviour, selectable
- · Self monitoring with automatic alarm
- Multi-functional LC display
- Adjustable response delay
- Two-module enclosure (36 mm)
- · Push-wire terminal (two terminals per connection)

# Approvals







#### **Product description**

The ISOMETER® of the IR423 series monitors the insulation resistance RF of an unearthed AC system of 0...300 V to earth that is supplied by a mobile generator. The IR423 is suitable for AC systems with operating frequencies ≥ 30 Hz as well as for AC systems with directly connected DC circuits. The maximum permissible system leakage capacitance  $C_{emax}$  is 5  $\mu F$ .

#### Application

- IEC 60364-7-717, DIN VDE 0100-717 (2005) Electrical installations in mobile or transportable units
- DIN VDE 0100-551 (VDE 0100-551), IEC 60364-5-551 Low-voltage generating sets (mobile generators)
- GW 308 "Mobile Stromerzeuger für Rohrleitungsbaustellen 8/00" (Mobile auxiliary power generators on pipeline site") (DVGW)
- BGI 867 (German Berufsgenossenschaft Information) Auswahl und Betrieb von Ersatzstromerzeugern auf Bau- und Montagestellen (Selecting and operating standby generators on construction and installation sites)

#### **Function**

The currently measured insulation resistance is indicated on the LC display. In this way, any changes, for example, when circuits of loads are connected to the system, can be recognised easily. When the value falls below the preset response values, the response delay " $t_{on}$ " starts. Once the response delay " $t_{on}$ " has elapsed, the alarm relays "K1/K2" switch and the alarm LEDs "AL1/AL2" light up. Two separately adjustable response values/alarm relays allow a distinction to be made between prewarning and alarm. If the insulation resistance exceeds the release value (response value plus hysteresis), the alarm relays return to their initial position. If the fault memory is enabled, the alarm relays remain in the alarm state until the reset button is pressed or until the supply voltage is switched off. The device function can be tested using the test button. The parameterisation of the device can be carried out via the LC display or the function keys integrated in the front plate.

#### **Connection monitoring**

The connections to the system (L1/L2) and earth (E/KE) are either automatically checked every 1 h, or by pressing the test button or when supply voltage is applied. In case of interruption of a connecting lead, the alarm relay K2 switch, the LEDs ON/AL1/AL2 flash and the following message appears on the display:

"E.02" signals a fault in the connecting leads to the system,

"E.01" signals a fault in the connecting leads to PE.

After eliminating the fault, the alarm relays return to their initial position either automatically or by pressing the reset button.

#### Measurement method


The ISOMETER® of the IR423 series uses a modified measurement method specially suited for mobile power generators (also for inverter technology).

# Standards

The ISOMETER® of the IR423 series complies with the requirements of the device standards: DIN EN 61557-8 (VDE 0413-8), EN 61557-8, IEC 61557-8, IEC 61326-2-4, DIN EN 60664-1 (VDE 0110-1), DIN EN 60664-3 (VDE 0110-3), ASTM F1669M-96 (2007), ASTM F1207M-96 (2007)




## **Operating elements**

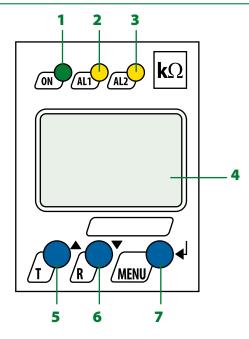

- 1 Power On LED "ON", flashes in case of interruption of the connecting leads E/KE or L1/L2
- 2 Alarm LED "AL1", lights when the value falls below the set response value Alarm 1 and flashes in case of interruption of the connecting leads E/KE or L1/L2
- 3 Alarm LED "AL2", lights when the value falls below the set response value Alarm 2 and flashes in case of interruption of the connecting leads E/KE or L1/L2
- 4 LC display
- 5 Test button "T": to call up the self test. Arrow up button: parameter change, to move up in the menu
- 6 Reset button "R": to delete stored insulation fault alarms parameter change, to move down in the menu
- 7 "MENU" button: to call up the menu system. Enter button: to confirm parameter changes

#### Wiring diagram

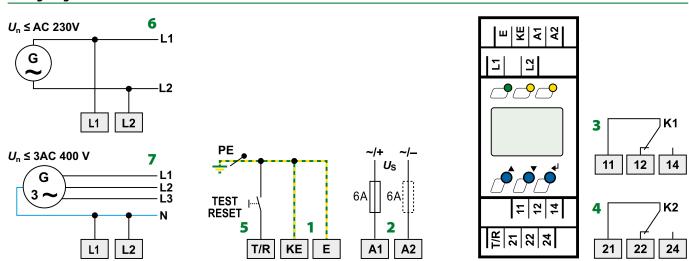


- 1 Connect the leads E and KE separately to PE.
- 2 Supply voltage U<sub>S</sub> (see nameplate) via 6 A fuse
- 3 Alarm relay K1
- 4 Alarm relay K2 (system fault relay)

- 5 for combined external test/reset button
- **6**  $U_n \le AC$  230 V: Terminals L1/L2 to L1/L2 of the generator
- 7  $U_n \le 3AC 400 \text{ V: Terminals L1/L2 to N of the generator}$




# **Examples of application**

Protective measure for mobile geneerators: "Protection by electrical separation with insulation monitoring and disconnection"

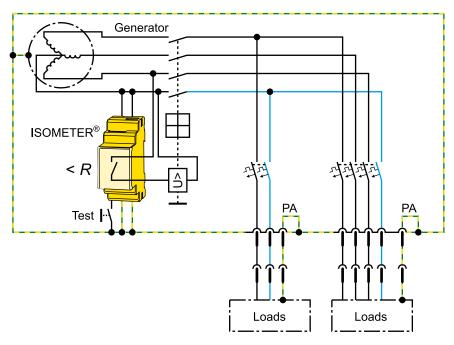

Setting K1/K2 for overvoltage release: N/O operation (n.o.); Fault memory setting: OFF

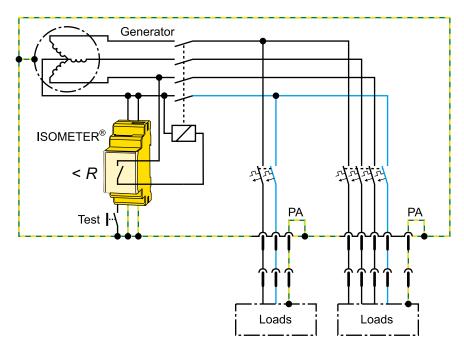

Setting K1/K2 for **contactor**: N/C operation (n.c.), fault memory setting: ON



# **Technical data**

Insulation coordination acc. to IEC 6066	4-1/IEC 6	60664-3			
Rated insulation voltage					250 V
Rated impulse voltage/pollution degree					4 kV/3
Protective separation (reinforced insulation)	between				
(A1, A2) -	(L1, L2, E	, KE, T/R)	- (11, 12,	, 14) - (21	, 22, 24)
Voltage test acc. to IEC 61010-1					2.21 kV
Supply voltage					
Supply voltage $U_{\rm S}$			see ord	lering info	rmation
Frequency range U <sub>S</sub>					.460 Hz
Power consumption					≤ 4 VA
IT system being monitored					
Nominal system voltage U <sub>n</sub>				AC 0	300 V
Nominal frequency f <sub>n</sub>					.460 Hz
· · · ·					
Response values				20010/	4410)×
Response value R <sub>an1</sub> (Alarm 1)				200 kΩ (	
Response value R <sub>an2</sub> (Alarm 2)			1	200 kΩ (	
Relative uncertainty $15 \text{ k}\Omega/5200 \text{ k}\Omega$ Hysteresis $15 \text{ k}\Omega/5200 \text{ k}\Omega$				$\pm 0.5 \mathrm{k}\Omega$	/± 15 % /+ 25 %
nysteresis 13 kg2/3200 kg2				+ 1 KL 2	+ 23 %
Time response					
Response time $t_{\rm an}$ at $R_{\rm F} = 0.5$ x $R_{\rm an}$ and $C_{\rm e} =$	1 μF				≤ 1 s
Start-up delay (start time) t					) s (0 s)*
Response delay ton				099	s (0 s)*
Measuring circuit					
Measuring voltage $U_{\rm m}$					± 12 V
Measuring current $I_{\rm m}$ (at $R_{\rm F}=0~\Omega$ )					200 μΑ
Internal DC resistance R <sub>i</sub>	·				
Impedance Z <sub>i</sub> at 50 Hz					≥ 60 kΩ
Permissible extraneous DC voltage $U_{\rm fg}$				≤l	OC 300 V
Permissible system leakage capacitance					≤ 5 µF
Displays, memory					
Display	LC displa	y, multi-f	unctional	l, non-illu	
Display range, measured value					1ΜΩ
Operating uncertainty 15 k $\Omega$ /5 k $\Omega$ 1	MΩ			± 0.5 kΩ	
Password			(	off/099	
Fault memory (alarm relay)					on/off*
Outputs					
Cable length test and reset button					≤ 10 m
Switching elements					
Number of switching elements			2 x 1 cł	nangeovei	contact
Operating principle	N	IC or N/O	operation	(N/O ope	ration)*
Electrical endurance, number of cycles					10000
Contact data acc. to IEC 60947-5-1					
Utilisation category	AC-13	AC-14	DC-12	DC-12	DC-12
Rated operational voltage	230 V	230 V	220 V	110 V	24 V
Rated operational current	5 A	3 A	0.1 A	0.2 A	1 A
Contact rating			1 m.	A at AC/D	L ≥ 10 V

Environment/EMC	
EMC	acc. to IEC 61326
Operating temperature	-25+55 °C
Climatic class acc. to IEC 60721	
Stationary use (IEC 60721-3-3)	3K5 (except condensation and formation of ice)
Transport (IEC 60721-3-2)	2K3 (except condensation and formation of ice)
Long-time storage (IEC 60721-3-1)	1K4 (except condensation and formation of ice)
Classification of mechanical conditions	IEC 60721
Stationary use (IEC 60721-3-3)	3M4
Transport (IEC 60721-3-2)	2M2
Long-time storage (IEC 60721-3-1)	1M3

#### Connection Connection type push-wire terminal **Connection properties** 0.2...2.5 mm<sup>2</sup> (AWG 24...14) rigid flexible without ferrule $0.75\ldots2.5~\text{mm}^2~\text{(AWG~19}\ldots14)$ flexible with ferrule 0.2...1.5 mm<sup>2</sup> (AWG 24...16) Stripping length 10 mm Opening force 50 N Test opening, diameter 2.1 mm

Other	
Operating mode	continuous operation
Mounting	any position
Degree of protection, internal components (DIN EN 60529)	IP30
Degree of protection, terminals (DIN EN 60529)	IP20
Enclosure material	polycarbonate
Flammability class	UL94 V-0
DIN rail mounting acc. to	IEC 60715
Screw mounting	2 x M4 with mounting clip
Documentation number	D00038
Weight	≤ 150 q

Ambient temperature	-40+70 °C
Climatic categories acc. to IEC 60721:	
Stationary use (IEC 60721-3-3)	3K5 (with condensation and formation of ice)
Classification of mechanical conditions ac	c. to IEC 60721:
Stationary use (IEC 60721-3-3)	3M7
Vibration resistance	acc. to IEC 60068-2-6
For DIN rail mounting	3 g/30150 Hz
For screw mounting	6 g/30150 Hz

( )\* = factory setting

Option "W"

# **Ordering information**

Version		Supply voltage <sup>1)</sup> <b>U</b> S		Туре	Art. No.	
Version	AC	DC	AC/DC	1,700	AI C. NO.	
Ctondond	1672 V, 30460 Hz	9.694 V	-	IR423-D4-1	B 7101 6304	
Standard	-	-	70300 V, 30460 Hz	IR423-D4-2	B 7101 6305	
High mechanical stress	1672 V, 30460 Hz	9.694 V	-	IR423-D4W-1	B 7101 6304W	
	_	-	70300 V, 30460 Hz	IR423-D4W-2	B 7101 6305W	

Device version with screw terminals on request.


#### **Accessories**

Type designation	Art. No.
Mounting clip for screw mounting (1 piece per device)	B 9806 0008

# **Dimension diagram XM420**


Dimensions in mm

Open the front plate cover in direction of arrow!

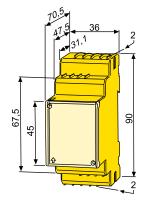

## **Screw mounting**

Note: The upper mounting clip must be ordered separately (see ordering information).

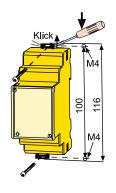



# Bender GmbH & Co. KG

P.O. Box 1161 • 35301 Gruenberg • Germany Londorfer Strasse 65 • 35305 Gruenberg • Germany Tel.: +49 6401 807-0 • Fax: +49 6401 807-259 E-Mail: info@bender.de • www.bender.de Przedstawiciel na Polskę: PRO-MAC ul. Bema 55, 91-492 Łódź tel. 42 6161681/691 e-mail: biuro@promac.com.pl



<sup>1)</sup> Absolute values